

 
acorn[®] 200

cordless robotic pool cleaner




Quick Start Guide


In this box

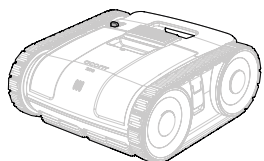

Acorn 200 Pool Cleaner

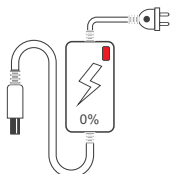 

Charger and Cable

 

Hook

QSG

Quick Start Guide



BEFORE YOU START



Before installing your new Acorn robotic cleaner for the first time, it is essential that you read and familiarise yourself with all the instructions and safety warnings contained in this Quick Start Guide.

A. Charging your Acorn 200


- ① Use a GFCI outlet, located at least 3.5 metres (11.5 feet) from the pool.
- ② Connect the charger and cable unit.
- ③ Insert the plug into the GFCI outlet.
- ④ Insert the other end of the cable into the charge socket at the rear of your Acorn cleaner.

NOTE: DO NOT USE AN EXTENSION CORD!


- ⑤ While the battery is charging, the light will be solid **RED**.

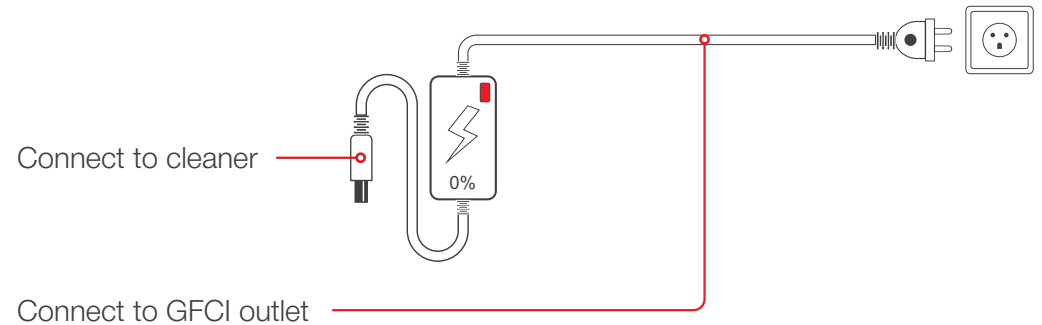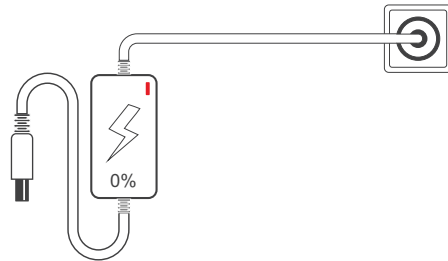

- ⑥ Once the battery is fully charged, the light will be solid **GREEN**.

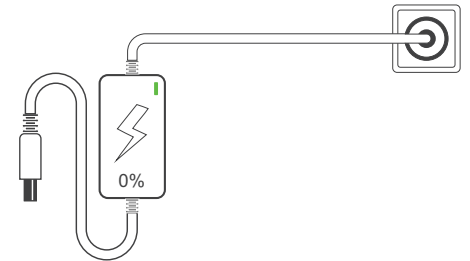



B. Scan to download the Acorn app to your preferred device

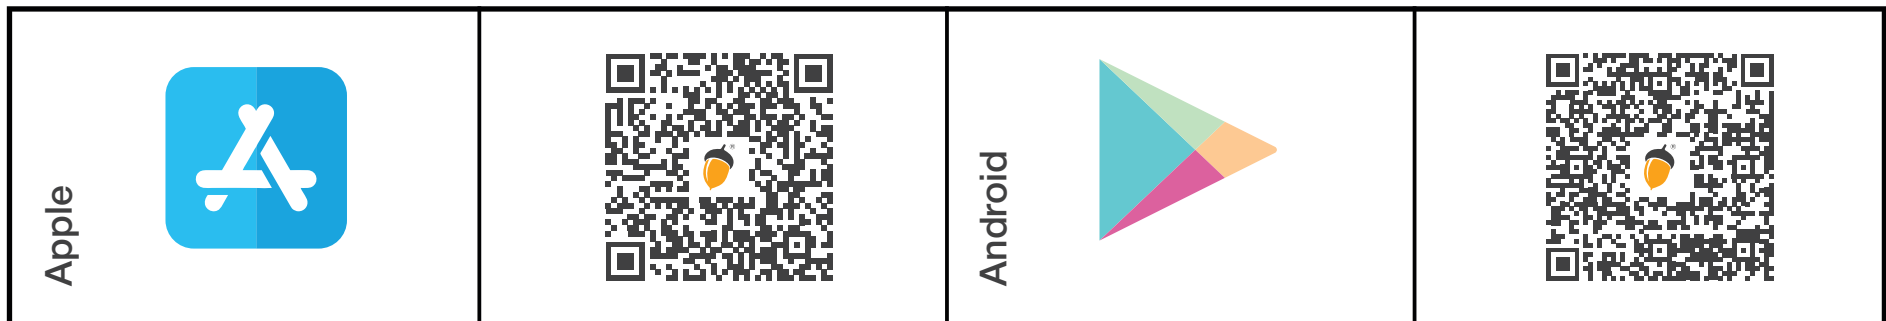

C. Cleaning your pool with your new Acorn 200.

The Acorn 200 has are three manual cleaning modes.


NOTE: The factory set mode of the Acorn 200 is mode 1 - **TotalClean™**.

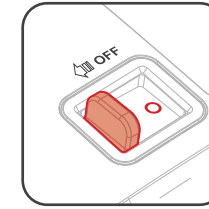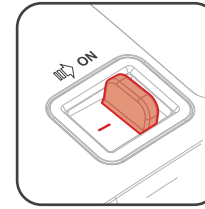

MODE 1 - TotalClean™ - In this mode, your Acorn 200 will clean the walls and the floor of the pool for approximately two and a half hours.



MODE 2 - FloorPlus™ - In this mode, the Acorn 200 will clean only the floor for approximately one and a half hours.

MODE 3 - WaterlinePro™ - In this mode, the Acorn 200 will climb the walls of the pool and clean around the waterline.

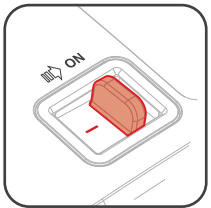

- ⑦ To activate **TotalClean™** mode, turn the cleaner on and then proceed to G3 below.

You now have approximately 30 seconds before the motors engage.

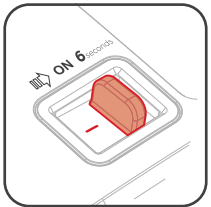
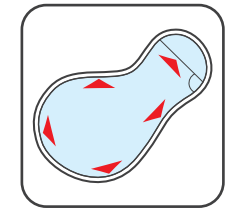


- ⑧ To activate **FloorPlus™** mode, turn the cleaner on and wait for six seconds.

Now turn the switch **OFF** and then **ON** again

Proceed to STEP G3 below.


You now have approximately 30 seconds before the motors engage.

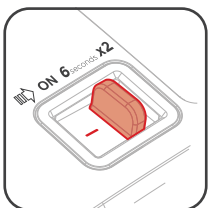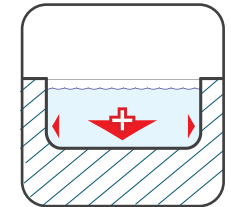


- ⑨ To activate **WaterlinePro™** mode, turn the cleaner on and wait for six seconds, then turn the cleaner **OFF** and immediately **ON** again.

Repeat this step before proceeding to G3 below.


You now have approximately 30 seconds before the motors engage.

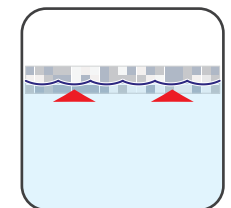


D. To use the Acorn 200 with the app, follow these easy steps to configure your cordless cleaner.

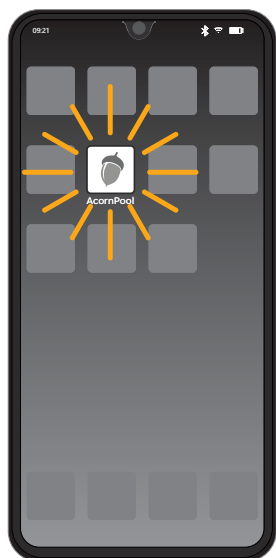

Open the
Acorn App

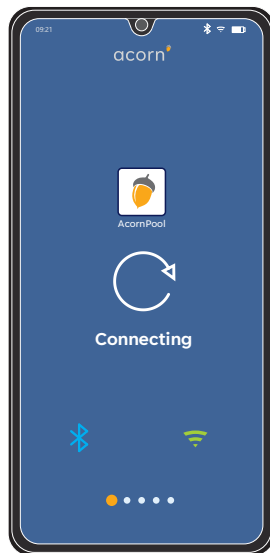


Automatic search
& connect

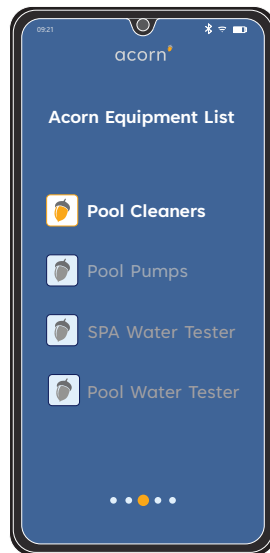


Select device



 Select model

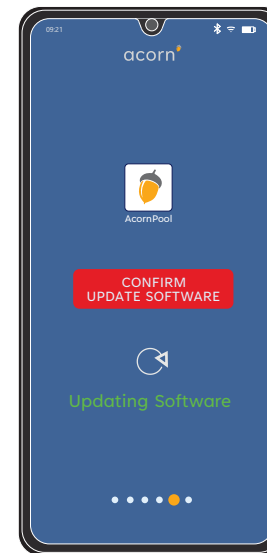


Confirm software
update

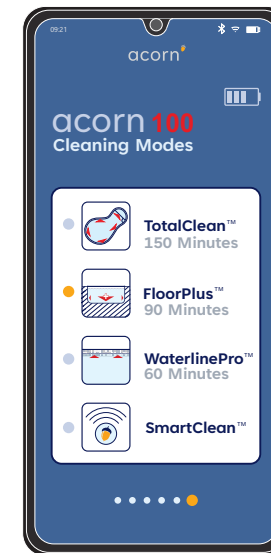 


Select cleaning
mode

 E. Available cleaning modes for the Acorn 200 on the app.

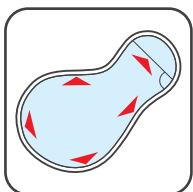


TotalClean™

 In this mode, your Acorn 200 will clean the walls and floor for approximately two and a half hours.

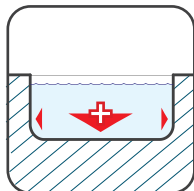

FloorPlus™

In this mode, the Acorn 200 will only clean the floor for approximately one and a half hours.

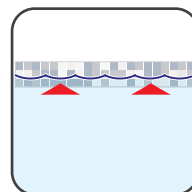

WaterlinePro™



In this mode, the Acorn 200 will climb the walls and clean along the waterline for one hour.



SmartClean™


This mode activates Acorn's innovative navigation technology, which automatically pairs the cleaner with the pool and configures the most suitable cleaning path.

F. ALWAYS USE THE POWER SWITCH ON THE TOP OF THE CLEANER TO TURN IT ON OR OFF.

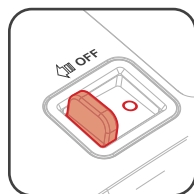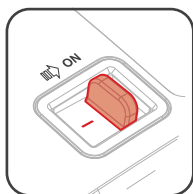


G. Getting your Acorn 200 wet.

- 1 Once you have selected the cleaning mode from the options on the app, place your Acorn 200 cleaner at the side of the pool and set the selector switch to **ON**.

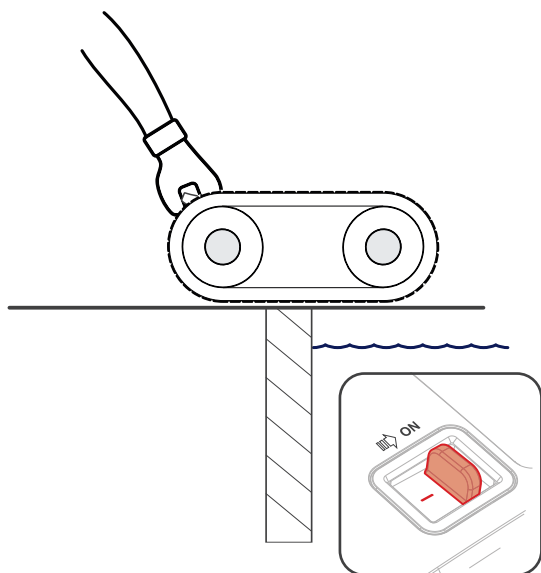


- 2 Press the START button on the screen to start the cleaner.

You will have 30 seconds before the motors engage

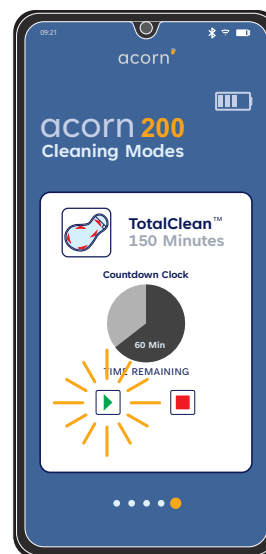


- 3 Place your Acorn cleaner in the water. Submerge completely, ensuring all the trapped air is expelled and then release it.

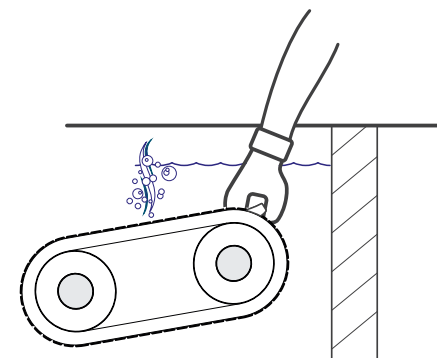


H. Removing your Acorn 200 Pool Cleaner from the pool

- ① Insert the hook, which comes with your Acorn 200, into the end of a pool pole.

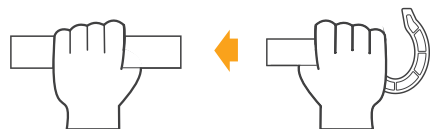


- ③ With the hook still around the Acorn handle, lift the cleaner until it breaks the surface of the pool.

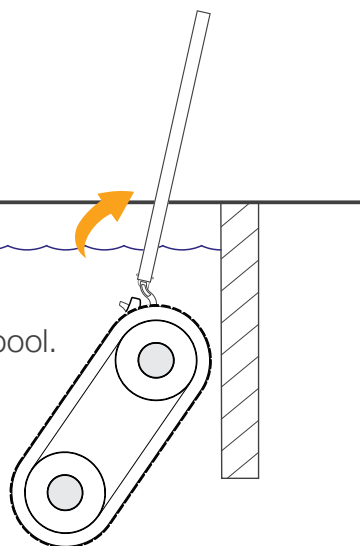


- ④ Remove the cleaner by grabbing the handle with your hand and lifting the cleaner clear of the pool.

Hold the cleaner above the water and allow the water it to drain.

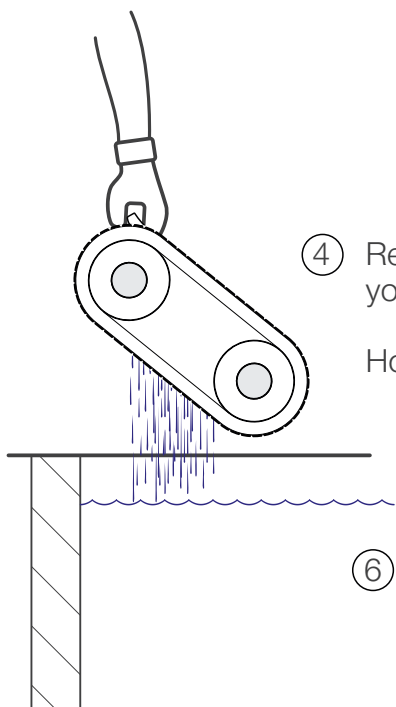


- ⑥ If you have not already done so, turn the on-off switch to **OFF**.


Leave your Acorn 200 at the side of the pool, allowing it to dry before cleaning the debris box, ready for it's next swim.

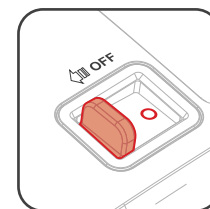

- ② Place the hook under the handle of your Acorn 200 and drag it to the side of the pool

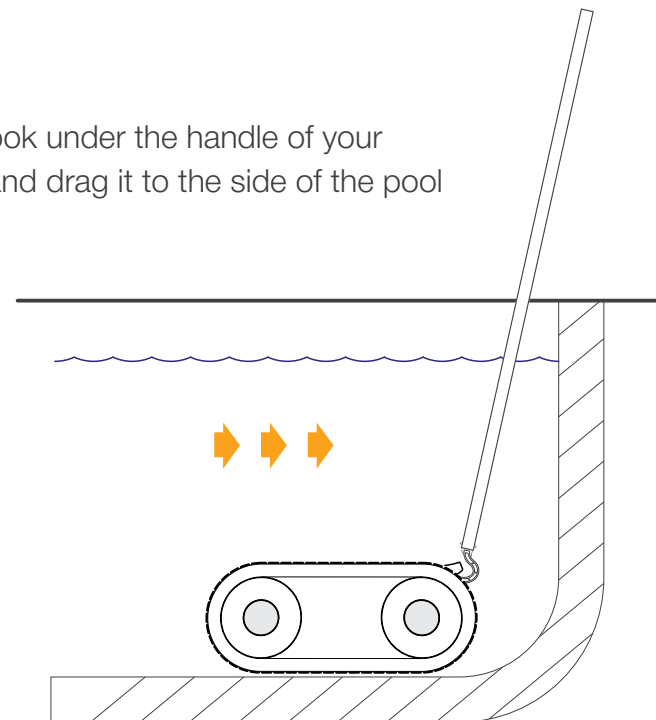

- ⑤ When the water has drained from the cleaner, gently lower it to rest on all four wheels by the side of the pool.

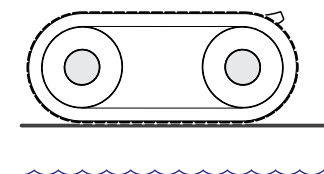

- ⑦ Turn the pump back on and allow it to run for 30 minutes after removing the cleaner from the pool.