


acorn® 500

cordless robotic pool cleaner



Quick Start Guide

In this box

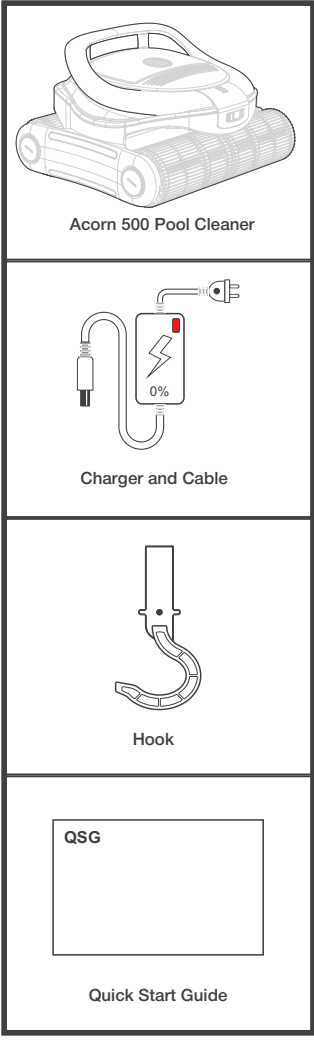


BEFORE YOU START

This Quick Start Guide contains essential installation and startup instructions. Read the complete guide and all safety warnings before commencing installation.


A. Charging your Acorn 500

- 1 Use a GFCI outlet, located at least 3.5 metres (11.5 feet) from the pool.
- 2 Connect the charger and cable unit.
- 3 Insert the plug into the GFCI outlet.
- 4 Insert the other end of the cable into the charge socket at the rear of your acorn cleaner.

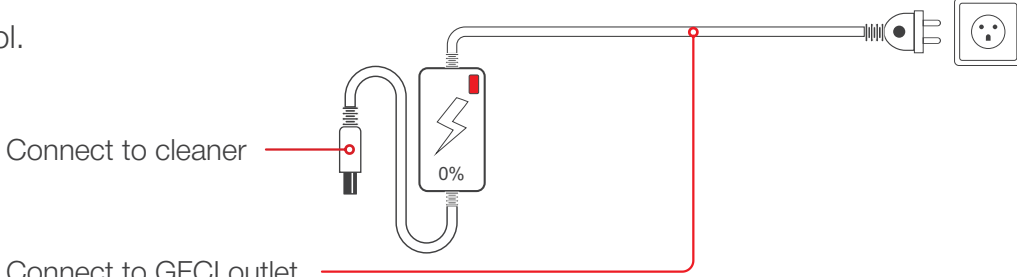


NOTE: DO NOT USE AN EXTENSION CORD!

- 5 While the battery is charging, the light will be solid **RED**.

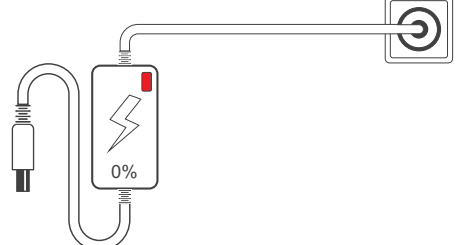


- 6 Once the battery is fully charged, the light will be solid **GREEN**.

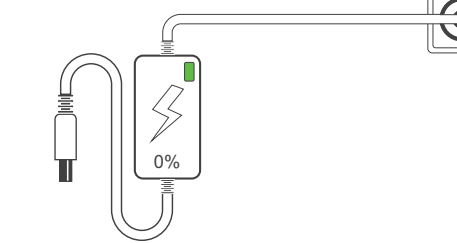


B. The Acorn App.

While your new Acorn 500 is charging, please download and install the app using one of the links below.

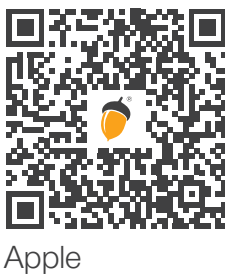


Apple

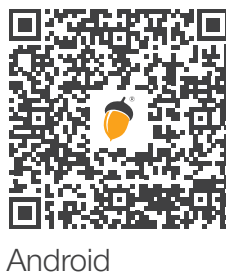

Android


B. On cleaner LED indicator array

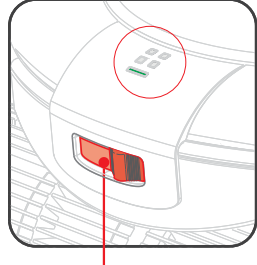

Selector switch

The Acorn 500 has five LEDs directly above the power switch. These are to help in getting feedback from your cleaner.

Their function will be explained and referred to later in this Quick Start Guide.

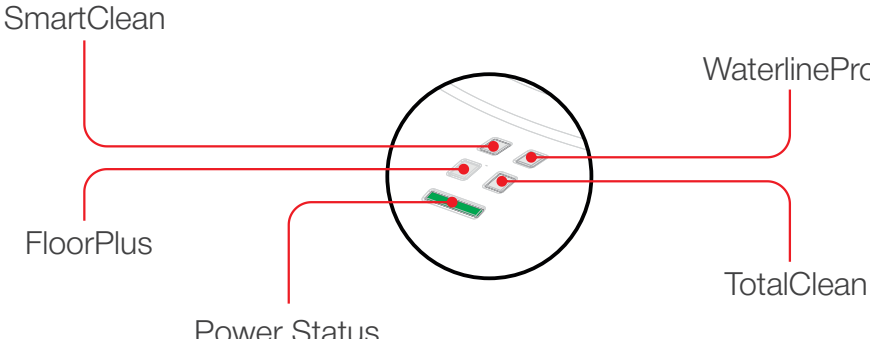


On startup, if the Power Status light is **RED**, then the cleaner is not fully charged.

A solid **GREEN** light indicates the cleaner is fully charged and ready to use.

B. Cleaning your pool with your new acorn 500.


The Acorn 500 has four cleaning modes.

NOTE: These relate to the LED indicators as described above which will illuminate when a particular cleaning mode is selected.

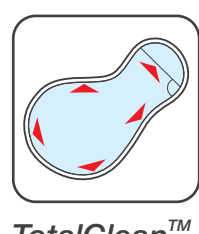


TotalClean™

In this mode, your Acorn 500 will clean the walls and floor for approximately two and a half hours.

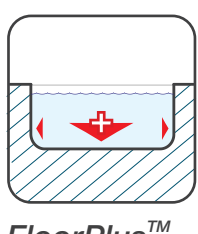

FloorPlus™

In this mode, the Acorn 500 will only clean the floor for about 90 minutes.

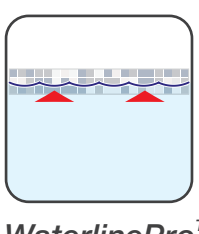

WaterlinePro™

In this mode, the Acorn 500 will climb the walls and clean along the waterline for an hour.




SmartClean™

This mode activates Acorn's innovative navigation technology, which automatically pairs the cleaner with the pool and configures the most suitable cleaning path.


D. To use your Acorn 500 with the app, follow these easy steps to configure your cleaner.



- 1 Open the Acorn App

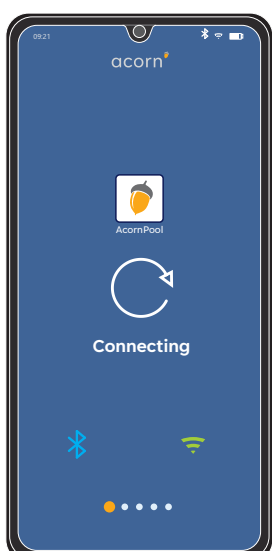


- 2 Automatic search & connect

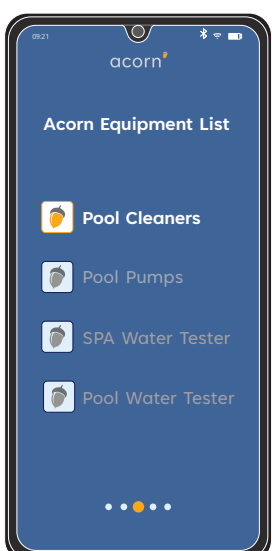


- 3 Select device



- 4 Select model

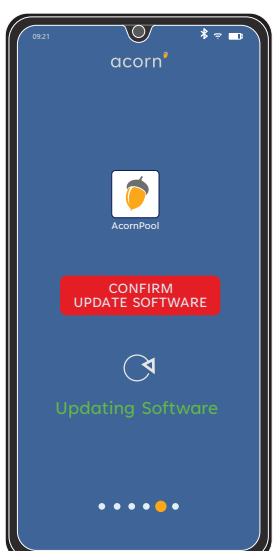

- 5 Confirm software update

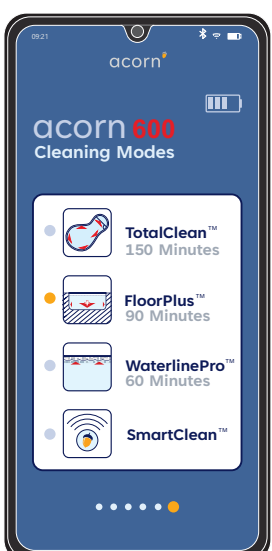


- 6 Select cleaning mode

Make sure you have turned your cleaner on and that it is at the side of the pool.

Once you have selected the cleaning mode in the last step, you will have 30 seconds before the motors start.

Please place your cleaner in the water and ensure there are no air bubbles remaining inside before you let it sink to the bottom of the pool. It is important that there be no air trapped in the cleaner as this could impact the performance.

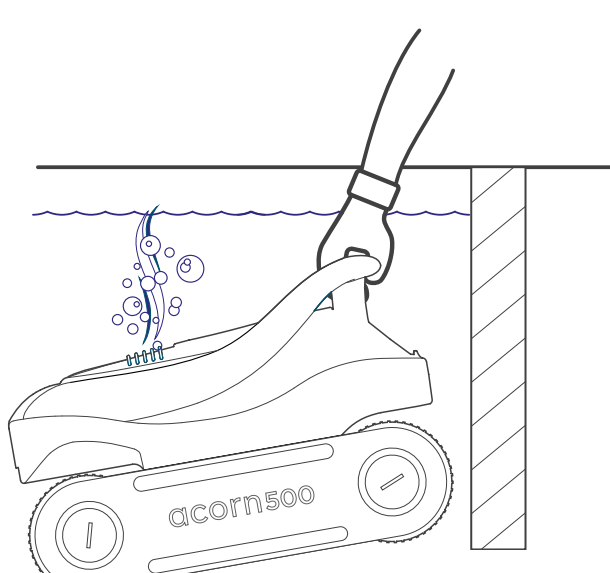


E. Manual program setting on the Acorn 500.

- 1 To activate **TotalClean™** mode, slide the switch to the right and allow it to return to the default position.

The bottom right LED in the array will turn green when this mode is activated.

You have approximately 30 seconds before the motors engage.

Place the cleaner in the water and completely submerge it before releasing it into the pool.

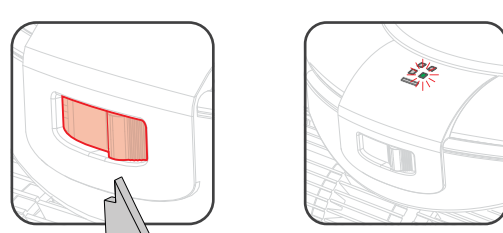


- 2 To activate **FloorPlus™**, slide the switch to the right and allow it to return to the default position. Repeat this step.

The bottom left LED in the array will turn green when this mode is activated.

You have approximately 30 seconds before the motors engage.

Place the cleaner in the water and completely submerge it before releasing it into the pool.

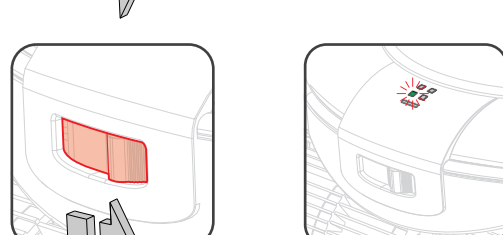


- 3 To activate **WaterlinePro™** mode, slide the switch to the right and allow it to return to the default position. Repeat this step. Do it again (3 times in total)

The top right LED in the array will turn green when this mode is activated.

You have approximately 30 seconds before the motors engage.

Place the cleaner in the water and completely submerge it before releasing it into the pool.


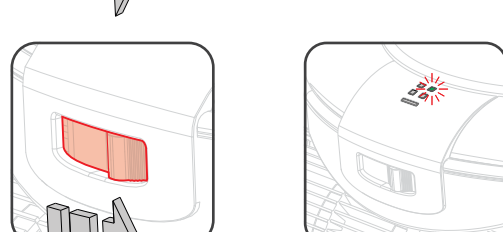


- 4 For **SmartClean™** mode, slide the switch to the right and allow it to return to the default position. Repeat this step. Do it again, and again (4 times in total)

The top left LED in the array will turn green when this mode is activated.

You have approximately 30 seconds before the motors engage.

Place the cleaner in the water and completely submerge it before releasing it into the pool.

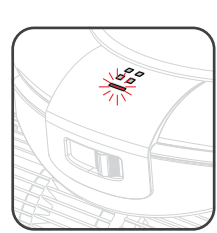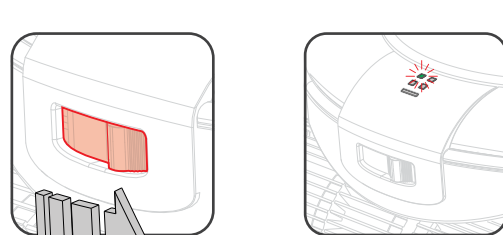


When the cleaner has completed its cycle, it will stop and the rectangular LED on the front of the cleaner will illuminate.

F. Removing your Acorn 500 Pool Cleaner from the pool


- 1 Insert the hook, which comes with your Acorn 500, into the end of a pool pole.



- 3 With the hook still around the Acorn handle, lift the cleaner until it breaks the surface of the pool.

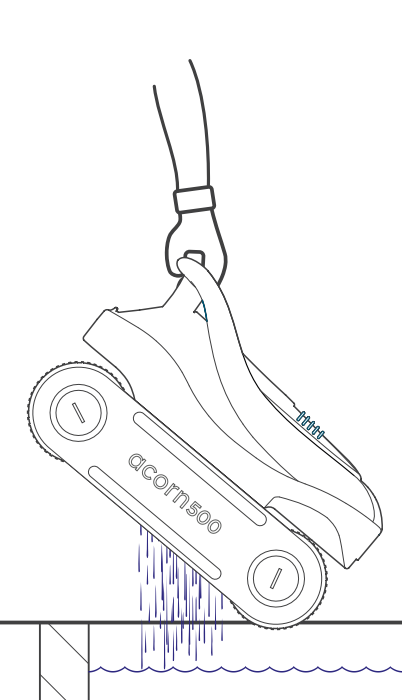

- 2 Place the hook under the handle of your Acorn 500 and drag it to the side of the pool

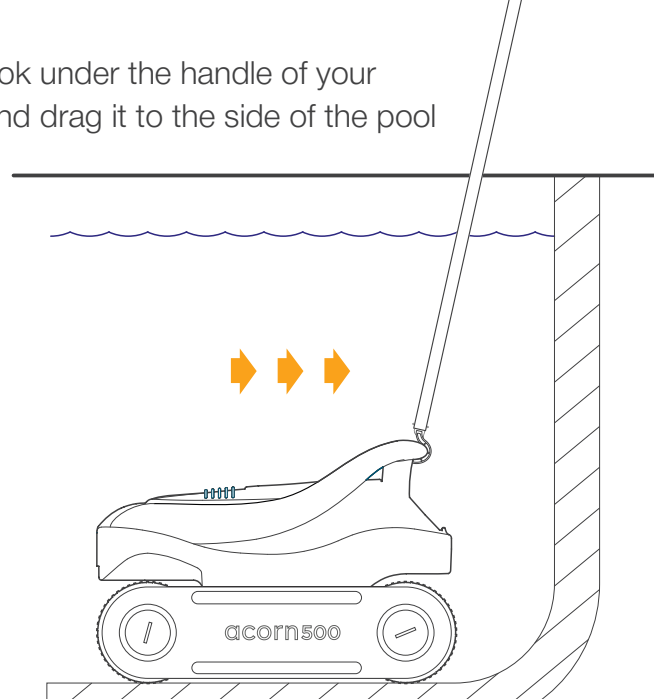


- 4 Remove the cleaner by grabbing the handle with your hand and lifting the cleaner clear of the pool.

Hold the cleaner above the water and allow the water to drain.

- 6 If you have not already done so, turn the on-off switch to **OFF**.

Allow your Acorn 500 to dry properly before cleaning the debris box, packing it away, ready for its next swim.

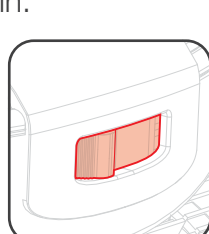

- 7 Leave the pump to run for 30 minutes after removing the cleaner from the pool.

